


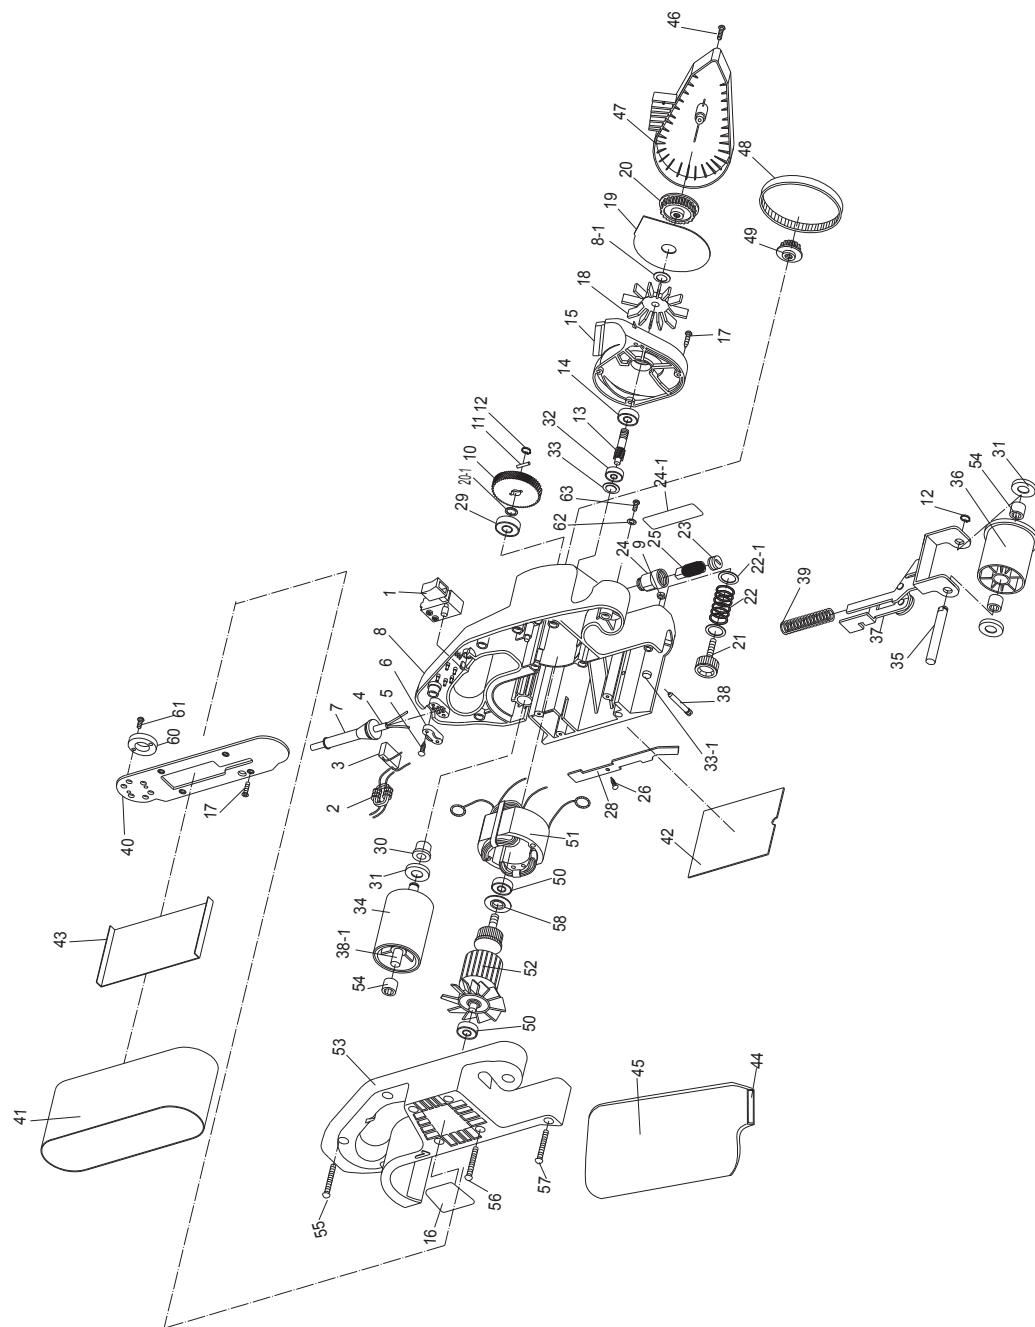

BS800

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SWITCH	32	BEARING 626
2	INDUCTANCE	33	CLOSE OVER
3	CAPACITOR	33-1	NUT
4	CORD AND PLUG	34	REAR WHEEL
5	SCREW	35	FRONT-WHEEL DRIVE AXIS
6	CORD CLAMP	36	FRONT-WHEEL
7	CORD SLEEVE	37	FRONT-WHEEL FRAME
8	LEFT HOUSING	38	ORIENTATION MELT
8-1	PLAIN WASHER	38-1	REAR WHEEL AXIS
9	NUT	39	SPRING
10	BIG GEAR	40	FRONT-COVER
11	COLUMN MELT Ø3	41	SANDING BELTS
12	RETAINING	42	LATEX CUSHION
13	SHAFT GEAR	43	BOTTOM PLATE
14	BEARING 608	44	DUST SUCTION SUPPORT
15	DUST SUCTION COVER	45	DUST BAG
16	NAME PLATE	46	SCREW
17	SCREW ST4.8X18	47	BELT COVER
18	FAN	48	BELT
19	COVER BOARD	49	SMALL-BELT-WHEEL
20	BIG-BELT-WHEEL	50	BEARING 608Z
20-1	PLAIN WASHER	51	STATOR
21	ADJUST-NUT	52	ROTOR
22	ADJUST SPRING	53	RIGHT HOUSING
22-1	WASHER	54	NEEDLE BEARING
23	BRUSH HOLDER COVER	55	SCREW ST4.8X20
24	CARBON-BRUSH HOLDER	56	SCREW
24-1	NAMEPLATE	57	SCREW M5X40
25	CARBON-BRUSH	58	INSULATE WASHER
26	SCREW	60	BEARING SEAT
28	BAFFLE	61	SCREW
29	BEARING 6000	62	PLAIN WASHER
30	OIL BEARING	63	SCREW M5X10
31	RING WASHER		